


5 TON COOLING SYSTEM CHARGE CHART R-410A REFRIGERANT

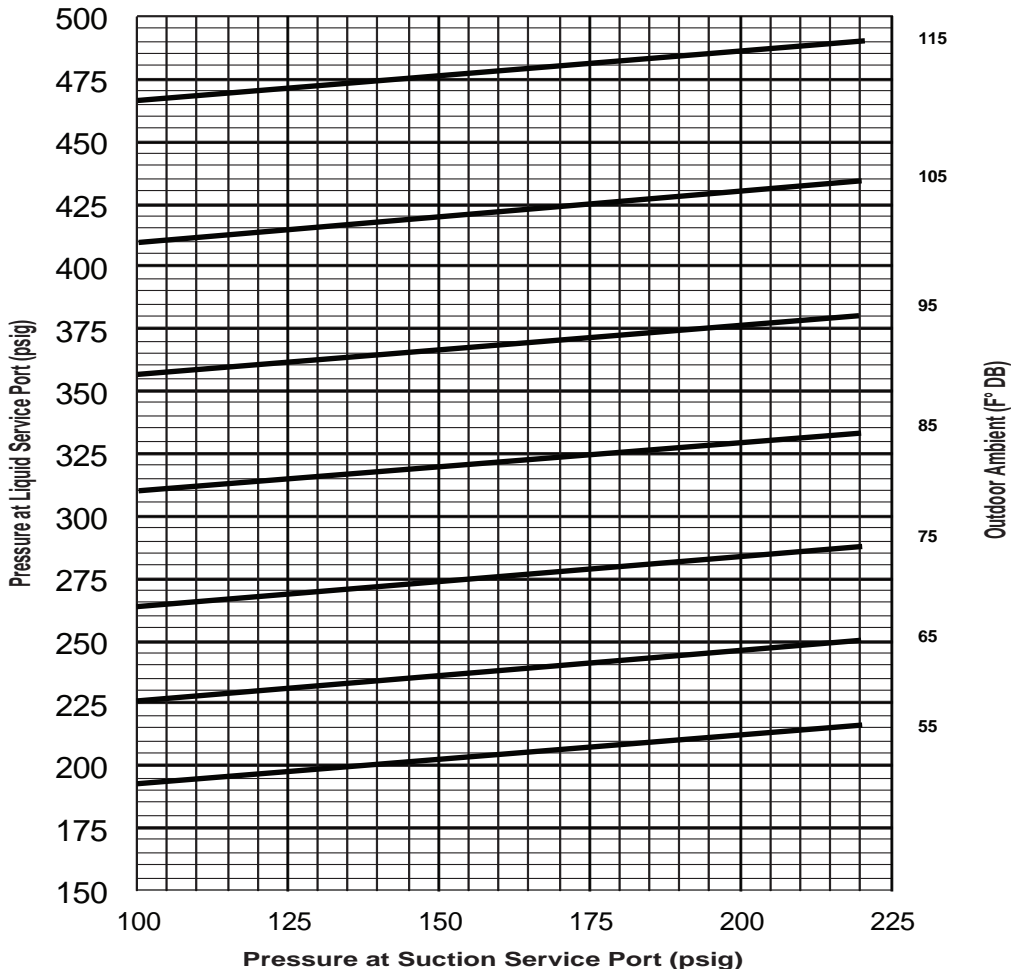

INSTRUCTIONS:

1. CONNECT PRESSURE GUAGES TO SUCTION AND LIQUID PORTS AT OUTDOOR UNIT.
2. MEASURE AIR TEMPERATURE TO THE UNIT (OUTDOOR DRY BULB AMBIENT).
3. PLACE AN "X" ON THE CHART WHERE THE SUCTION AND LIQUID PRESSURE CROSS.
4. IF "X" IS BELOW OUTDOOR TEMPERATURE LINE, ADD CHARGE AND REPEAT 3.
5. IF "X" IS ABOVE OUTDOOR TEMPERATURE LINE, RECOVER CHARGE AND REPEAT.