


# RAWL-079 (R410A)

A/C SYSTEM CHARGE CHART

## CAUTION:

RETURN AIR TEMPERATURE MUST BE WITHIN COMFORT CONDITIONS BEFORE FINAL REFRIGERANT CHECK!

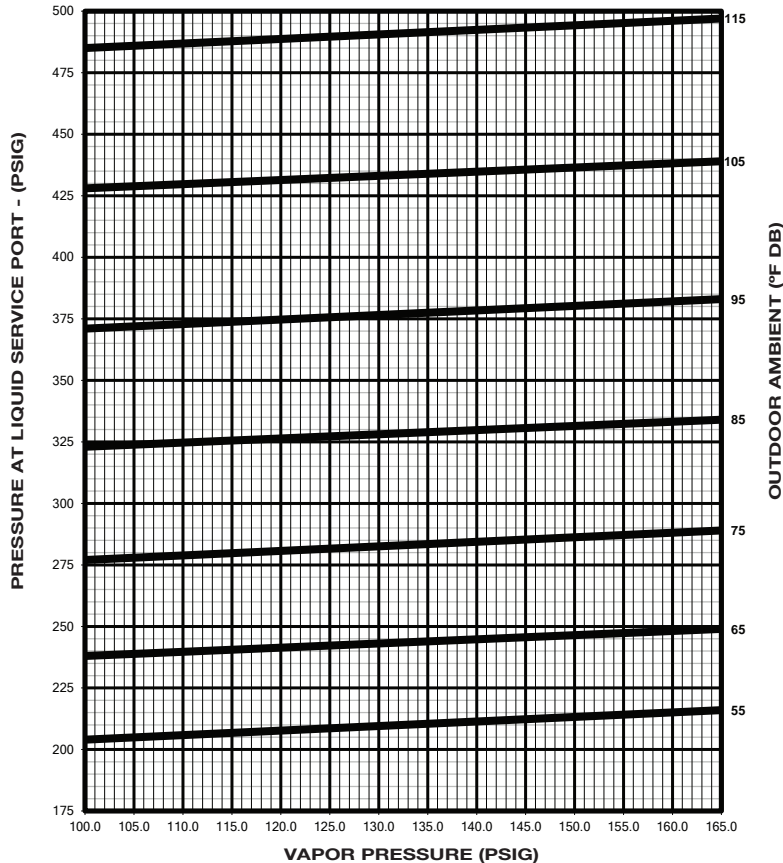

## INSTRUCTIONS:

1. MEASURE PRESSURE AT COMPRESSOR SUCTION AND LIQUID.
2. MEASURE OUTDOOR AMBIENT TO UNIT.
3. PLACE AN "X" ON THE CHART WHERE THE SUCTION AND LIQUID INTERSECT.
4. IF "X" IS BELOW OUTDOOR AMBIENT TEMPERATURE LINE, ADD CHARGE AND REPEAT STEPS 1-3.
5. IF "X" IS ABOVE AMBIENT TEMPERATURE LINE, RECOVER EXCESS CHARGE AND REPEAT STEPS 1-3.

